


Type "K" Thermocouple

Caution: When you use a SSR make a special effort to install a heat sink to eliminate possible overheating of component. These relays are great but you must follow directions in order to have a trouble free experience.

Auber SYL-2352P
Ramp and Soak Controller

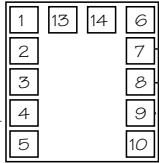


12Vt D.C.

Neutral

Controller
ON/OFF
Fuse
1/2 Amp

120 VAC

25 Amp SSR

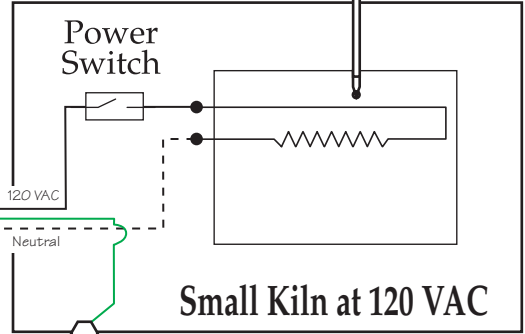

6" x 6" x 6" Euro Box Housing Shell

120 VAC
15 AMP
POWER SUPPLY